EN

airRoxy sp. z o.o.
ul. Graniczna 40
44-178 Przyszowice
Tel. (+48) 32 239 42 00
www.airroxy.com
e-mail: office@airroxy.com

USER MANUAL FOR ABS ACCESS PANEL

PRODUCT DESCRIPTION AND APPLICATION

Access doors provide safe access to electrical, water, or lighting installations routed inside walls or ceilings. Thanks to their smooth surface and uniform color, they also serve a decorative function, allowing visible valves, junction boxes, and other installation elements to be concealed while still maintaining easy service access.

The access doors are made of high-quality ABS plastic in snow-white or graphite color. **They feature a universal frame and door design, allowing the opening direction to be changed at any time, even after installation in the wall.They are equipped with a click-lock system, enabling quick installation and removal. They can be installed in both walls and ceilings.**

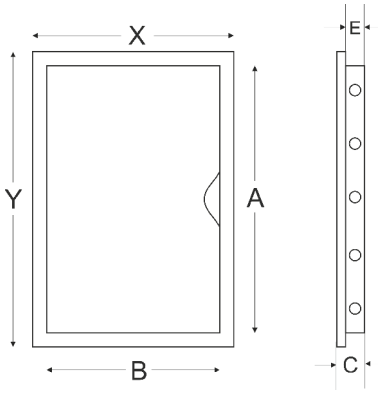

code	size	X [mm]	Y [mm]	A [mm]	B [mm]	C [mm]	E [mm]	colour
02-814a	10/10	115	115	85	85	20	15	
02-815a	10/15	115	165	135	85	20	15	
02-801a	15/15	165	165	135	135	20	15	
02-802a	15/20	165	215	185	135	20	15	
02-805a	15/30	165	315	285	135	20	15	
02-803a	20/20	215	215	185	185	20	15	
02-804a	20/25	215	265	235	185	20	15	
02-806a	20/30	215	315	285	185	20	15	
02-816a	25/25	265	265	235	235	20	15	
02-807a	25/30	275	325	285	235	25	20	white
02-817a	25/40	275	425	385	235	25	20	
02-808a	30/30	325	325	285	285	25	20	
02-809a	30/40	325	425	385	285	25	20	
02-812a	30/50	325	525	485	285	25	20	
02-818a	35/35	375	375	335	335	25	20	
02-811a	40/40	425	425	385	385	25	20	
02-815AGR	10/15	115	165	138	85	20	15	
02-801AGR	15/15	165	165	135	135	20	15	
02-802AGR	15/20	165	215	185	135	20	15	
02-804AGR	20/25	215	265	235	185	20	15	
02-805AGR	15/30	165	315	285	135	20	15	
02-803AGR	20/20	215	215	185	185	20	15	
02-814AGR	10/10	115	115	85	85	20	15	
02-806AGR	20/30	215	315	285	185	20	15	
02-816AGR	25/25	265	265	235	235	20	15	graphite
02-807AGR	25/30	275	325	285	235	25	20	
02-817AGR	25/40	275	425	385	235	25	20	
02-808AGR	30/30	325	325	285	285	25	20	
02-809AGR	30/40	325	425	385	285	25	20	
02-812AGR	30/50	325	525	485	285	25	20	
02-818AGR	35/35	375	375	335	335	25	20	
02-811AGR	40/40	425	425	385	385	25	20	

INSTALLATION

1. Carefully detach the door panel from the frame (Fig. 1).
2. Prepare the access opening in accordance with the dimensions of the door frame (Fig. 2).
3. Place the door frame into the prepared access opening and carefully level it (Fig. 3). Fix the frame using an installation adhesive (e.g. silicone or mortar) or mounting screws, depending on the type of substrate. The adhesive or screws should be applied only through the designated installation holes located inside the frame (Fig. 4).
4. After the adhesive has fully cured (or after completing mechanical installation), install the door panel into the frame (see Fig. 5).

Warning! The door frame must not be subjected to any stress or deformation, and the outer flange of the frame should lie flush against the wall without any gaps or tension.

Fig.1

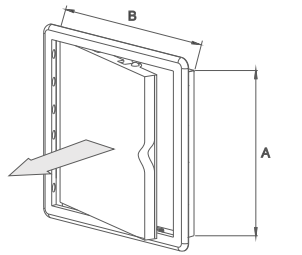

Fig.2

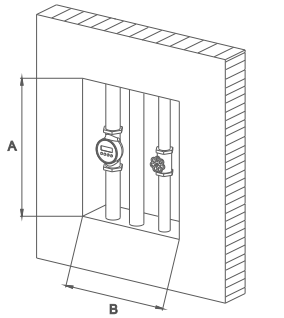

Fig.3

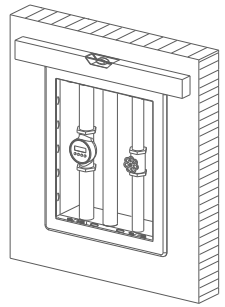

Fig.4

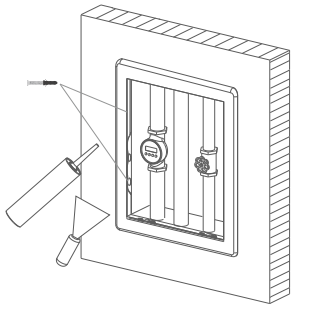

Fig.5

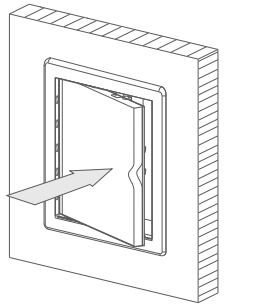

Warning! airRoxy sp. z o.o. shall not be held liable for any damage resulting from improper handling, use contrary to the intended purpose, or from unauthorized repairs or modifications.